


PLANO DE ESTACIONAMIENTO Y ATRAQUE DE AERONAVES/
AIRCRAFT PARKING/DOCKING CHART

ELEV AD 1860.5 M

TWR / APP
ATIS

118.1
132.1

DURANGO
AEROPUERTO INTL /
INTL AIRPORT

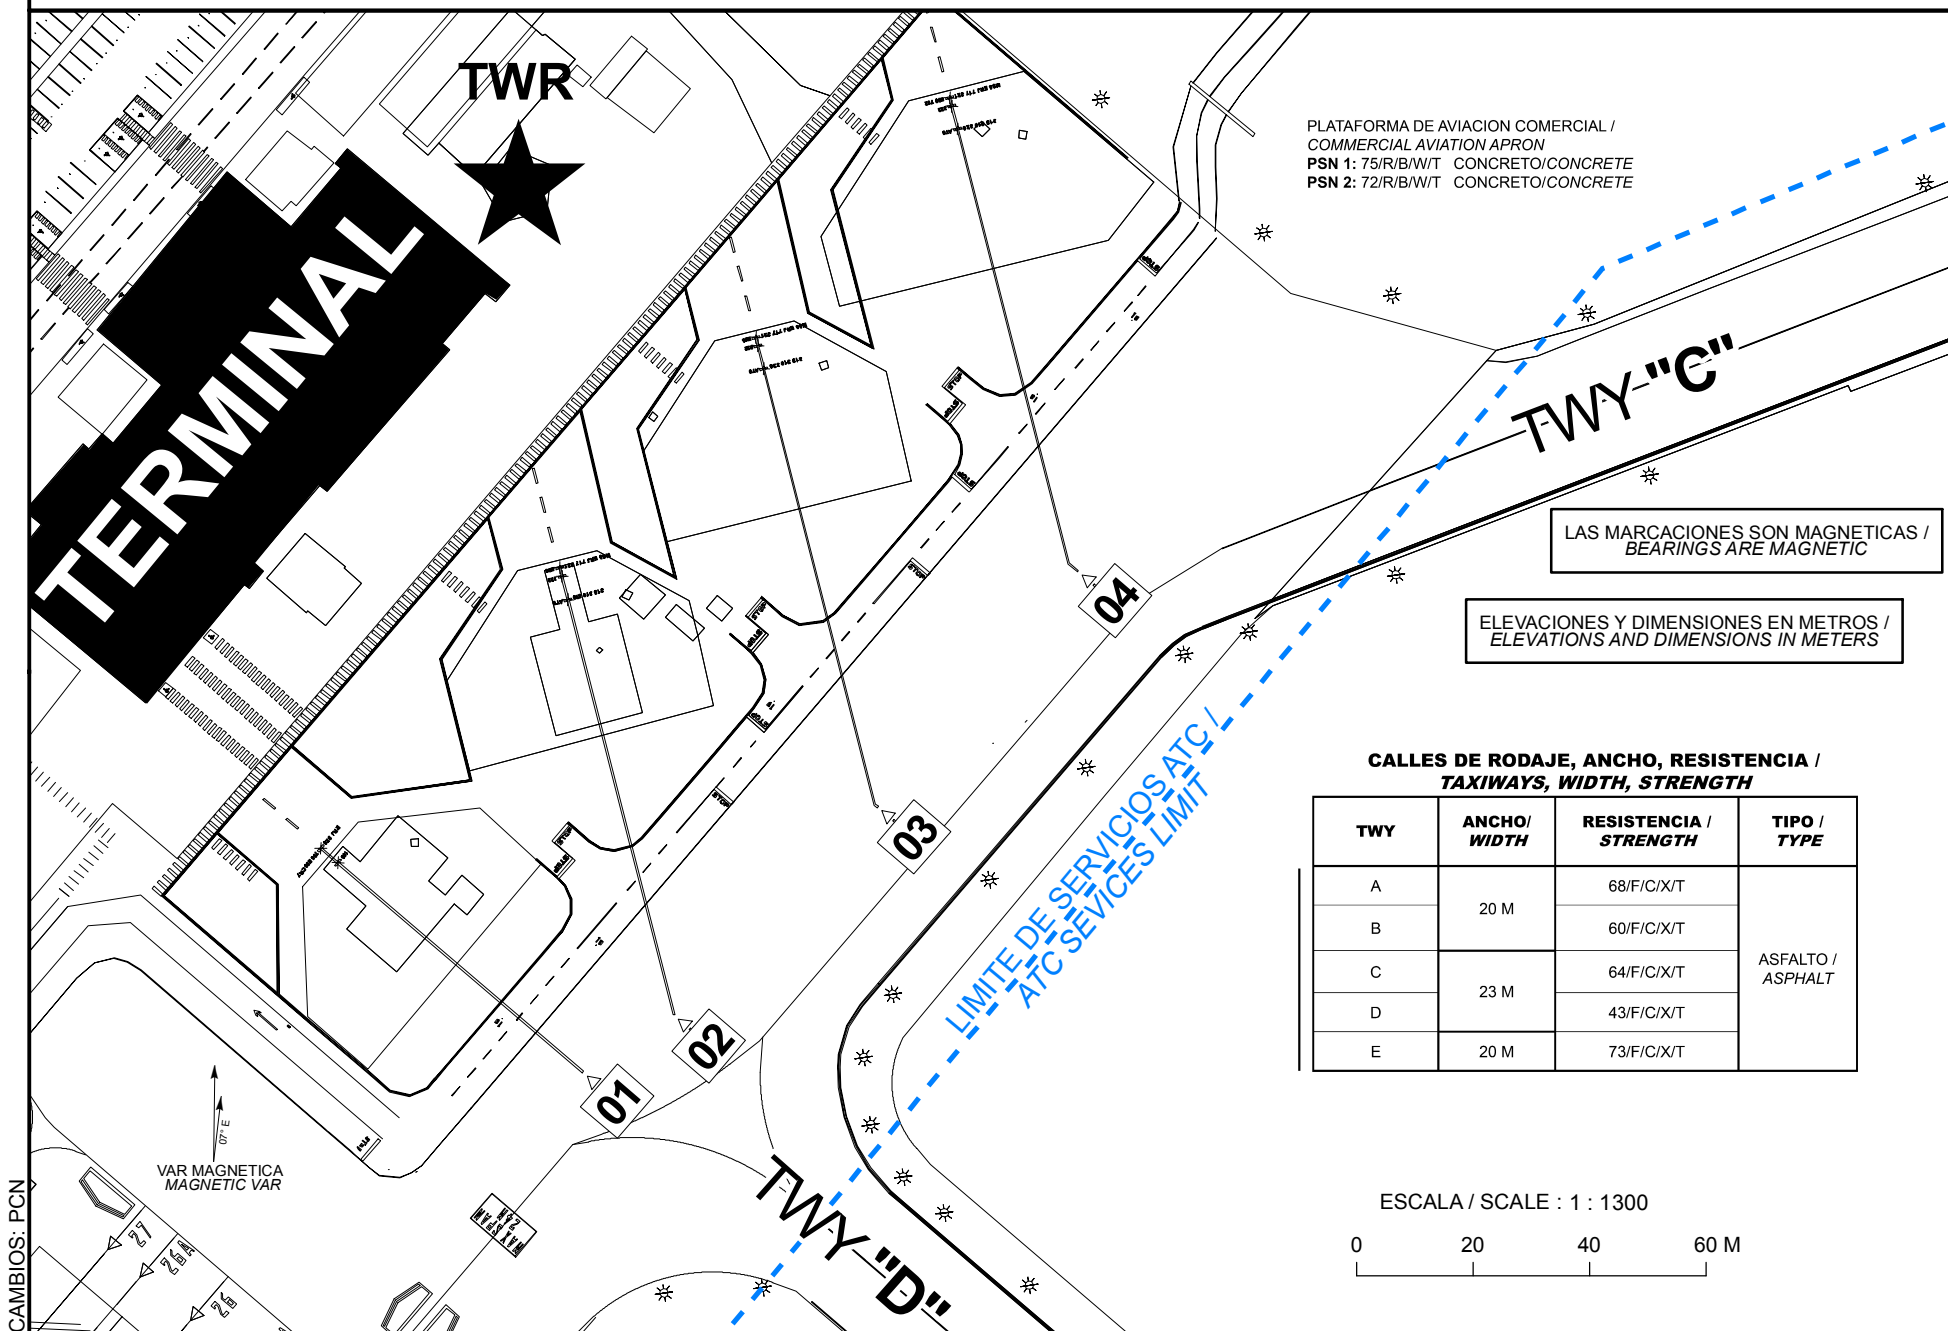

COORDENADAS INS DE PUESTOS DE ESTACIONAMIENTO DE AERONAVES AVIACION COMERCIAL /
COORDINATES INS, FOR AIRCRAFT STANDS, COMMERCIAL AVIATION

POSICION/ POSITION	LAT (N)	LONG (W)
1	24° 07' 31.68"	104° 32' 01.57"
	24° 07' 31.61"	104° 32' 01.46"
2	24° 07' 33.24"	104° 32' 00.24"
	24° 07' 33.20"	104° 32' 00.22"
	24° 07' 33.07"	104° 32' 00.18"
3	24° 07' 34.52"	104° 31' 59.14"
	24° 07' 34.48"	104° 31' 59.13"
	24° 07' 34.36"	104° 31' 59.09"
4	24° 07' 35.86"	104° 31' 58.07"
	24° 07' 35.81"	104° 31' 58.05"
	24° 07' 35.69"	104° 31' 58.01"