


PLANO DE ESTACIONAMIENTO Y ATRAQUE DE AERONAVES/  
AIRCRAFT PARKING/DOCKING CHART

ELEV AD 11.5 M

TWR	118.3
APP	121.2
FPQ	122.3
EMERG	121.5

**MAZATLAN**  
AEROPUERTO INTL /  
INTL AIRPORT

**GRAL. RAFAEL BUELNA**

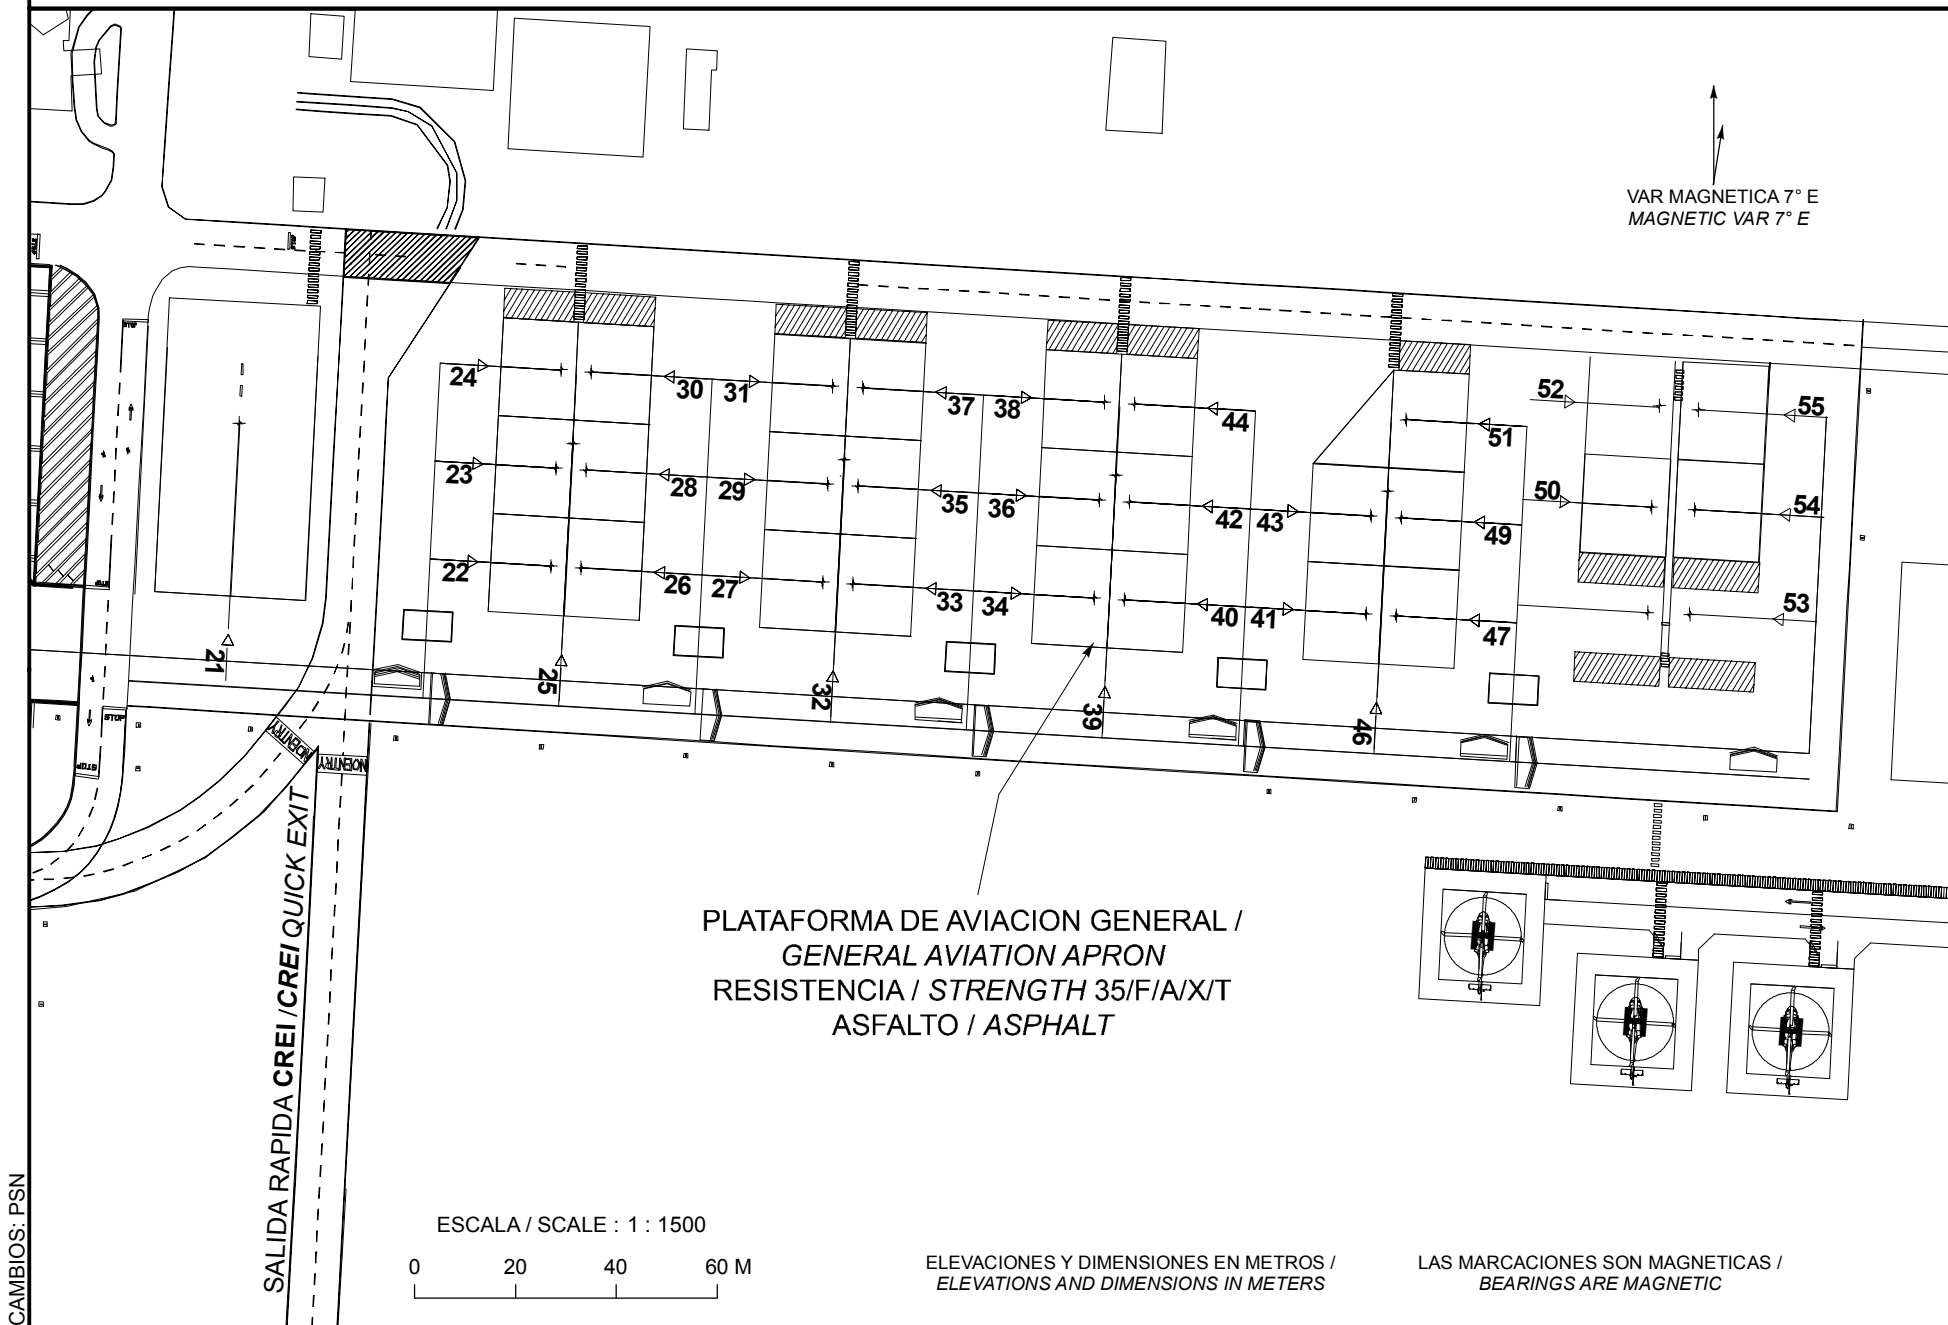

**COORDENADAS INS, DE PUESTOS DE ESTACIONAMIENTO DE AERONAVES AVIACION GENERAL /  
COORDINATES INS, FOR AIRCRAFT STANDS, GENERAL AVIATION**

POSICION/ POSITION	LAT (N)	LONG (W)
21	23° 09' 57.12"	106° 16' 03.52"
22	23° 09' 56.29"	106° 16' 01.37"
23	23° 09' 56.87"	106° 16' 01.33"
24	23° 09' 57.45"	106° 16' 01.30"
25	23° 09' 57.01"	106° 16' 01.19"
26	23° 09' 56.27"	106° 16' 01.09"
27	23° 09' 56.19"	106° 15' 59.47"
28	23° 09' 56.86"	106° 16' 01.05"
29	23° 09' 56.78"	106° 15' 59.44"
30	23° 09' 57.44"	106° 16' 01.02"
31	23° 09' 57.36"	106° 15' 59.40"
32	23° 09' 56.92"	106° 15' 59.29"
33	23° 09' 56.18"	106° 15' 59.20"
34	23° 09' 56.10"	106° 15' 57.57"
35	23° 09' 56.76"	106° 15' 59.16"
36	23° 09' 56.68"	106° 15' 57.54"
37	23° 09' 57.35"	106° 15' 59.12"
38	23° 09' 57.27"	106° 15' 57.51"
39	23° 09' 56.82"	106° 15' 57.39"

POSICION/ POSITION	LAT (N)	LONG (W)
40	23° 09' 56.09"	106° 15' 57.28"
41	23° 09' 56.01"	106° 15' 55.67"
42	23° 09' 56.67"	106° 15' 57.26"
43	23° 09' 56.59"	106° 15' 55.64"
44	23° 09' 57.26"	106° 15' 57.23"
46	23° 09' 56.73"	106° 15' 55.49"
47	23° 09' 55.99"	106° 15' 55.40"
49	23° 09' 56.58"	106° 15' 55.36"
50	23° 09' 56.50"	106° 15' 53.75"
51	23° 09' 57.16"	106° 15' 55.33"
52	23° 09' 57.08"	106° 15' 53.71"
53	23° 09' 55.79"	106° 15' 53.22"
54	23° 09' 56.48"	106° 15' 53.27"
55	23° 09' 57.06"	106° 15' 53.24"
HELICOPTERO	23° 09' 54.08"	106° 15' 54.84"
HELICOPTERO 1	23° 09' 53.60"	106° 15' 53.76"
HELICOPTERO 2	23° 09' 53.54"	106° 15' 52.67"