

PLANO DE ESTACIONAMIENTO Y ATRAQUE DE AERONAVES /
AIRCRAFT PARKING/DOCKING CHART

ELEV AD 2244 M



TWR	118.25, 118.30
APP	119.00, 121.40, 128.85
SMC	121.80

SANTA LUCIA

AEROPUERTO INTL /
INTL AIRPORT

FELIPE ANGELES

ELEVACIONES EN METROS /
ELEVATIONS IN METERS

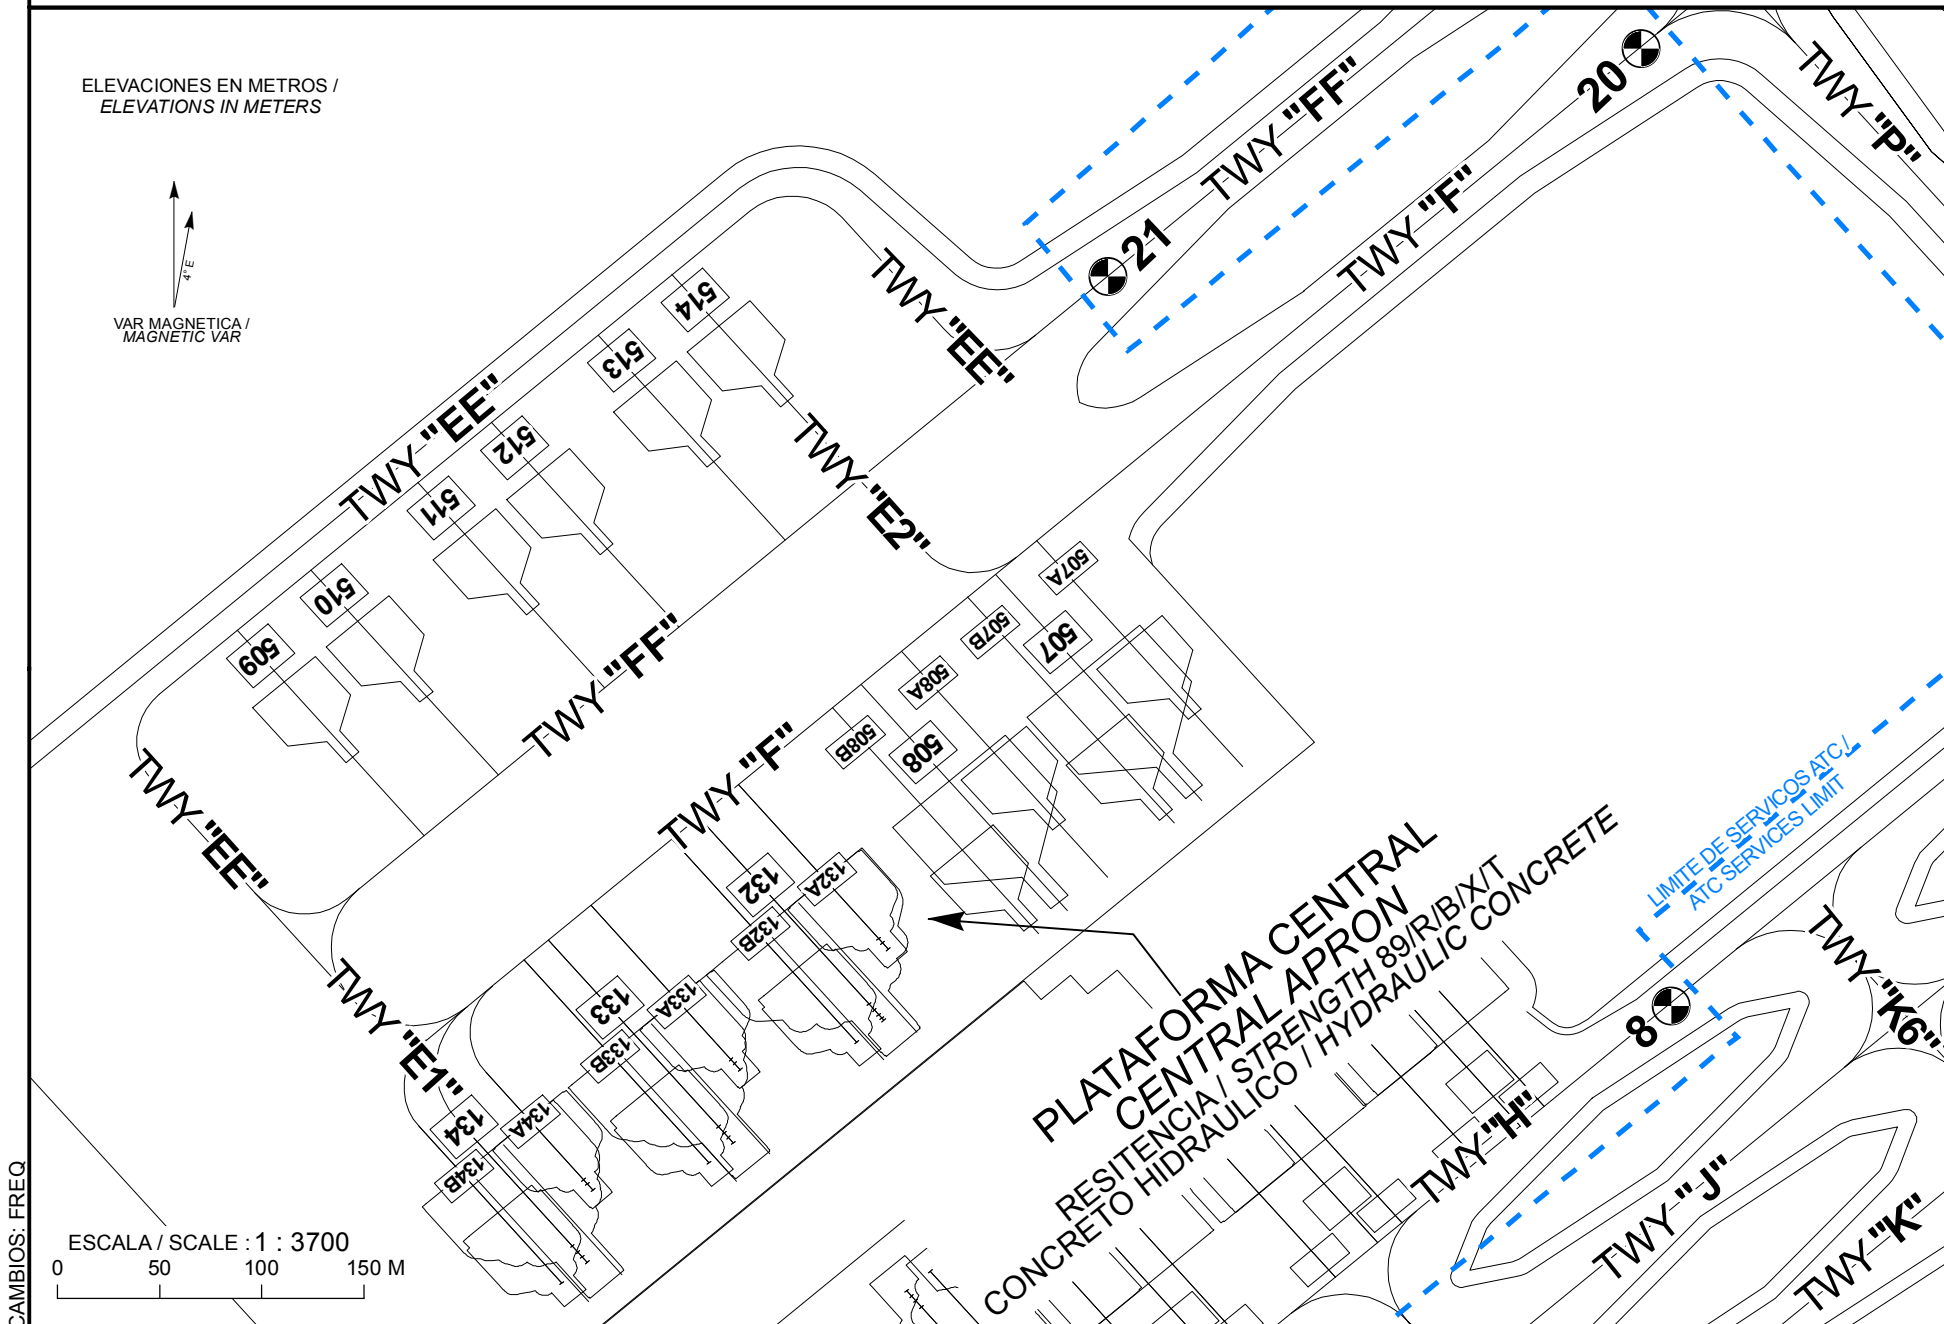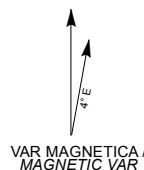

ESCALA / SCALE : 1 : 3700
0 50 100 150 M

CAMBIO: FREQ

**COORDENADAS INS, DE PUESTOS DE ESTACIONAMIENTO DE
AERONAVES PLATAFORMA CENTRAL /
COORDINATES INS, FOR AIRCRAFT STANDS CENTRAL APRON**

POSICION/ POSITION	LAT (N)	LONG (W)
507A	19° 44' 17.69"	099° 01' 11.04"
507	19° 44' 16.55"	099° 01' 11.13"
507B	19° 44' 16.19"	099° 01' 11.57"
508A	19° 44' 15.94"	099° 01' 13.19"
508	19° 44' 14.81"	099° 01' 13.26"
508B	19° 44' 14.43"	099° 01' 13.72"
132A	19° 44' 13.82"	099° 01' 15.76"
132	19° 44' 12.69"	099° 01' 15.83"
132B	19° 44' 12.35"	099° 01' 16.26"
133A	19° 44' 11.91"	099° 01' 18.1"
133	19° 44' 10.75"	099° 01' 18.21"
133B	19° 44' 10.44"	099° 01' 18.6"
134A	19° 44' 10.01"	099° 01' 20.44"
134	19° 44' 08.86"	099° 01' 20.53"
134B	19° 44' 08.53"	099° 01' 20.93"
509	19° 44' 17.03"	099° 01' 24.39"
510	19° 44' 17.99"	099° 01' 23.22"
511	19° 44' 19.37"	099° 01' 21.53"
512	19° 44' 20.33"	099° 01' 20.36"
513	19° 44' 21.71"	099° 01' 18.68"
514	19° 44' 22.66"	099° 01' 17.51"

**COORDENADAS PUNTOS DE TRANSFERENCIA /
HAND OFF POINTS COORDINATES**

POSICION/ POSITION	LAT (N)	LONG (W)
8	19°44' 13.01"	099° 01' 03.25"
20	19°44' 27.41"	099° 01' 04.73"
21	19°44' 23.11"	099° 01' 13.92"