


PLANO DE ESTACIONAMIENTO Y ATRAQUE DE AERONAVES/
AIRCRAFT PARKING/DOCKING CHART

ELEV AD 2244 M

TWR	118.25, 118.30
APP	119.00, 121.40, 128.85
SMC	121.80

SANTA LUCIA
AEROPUERTO INTL /
INTL AIRPORT
FELIPE ANGELES

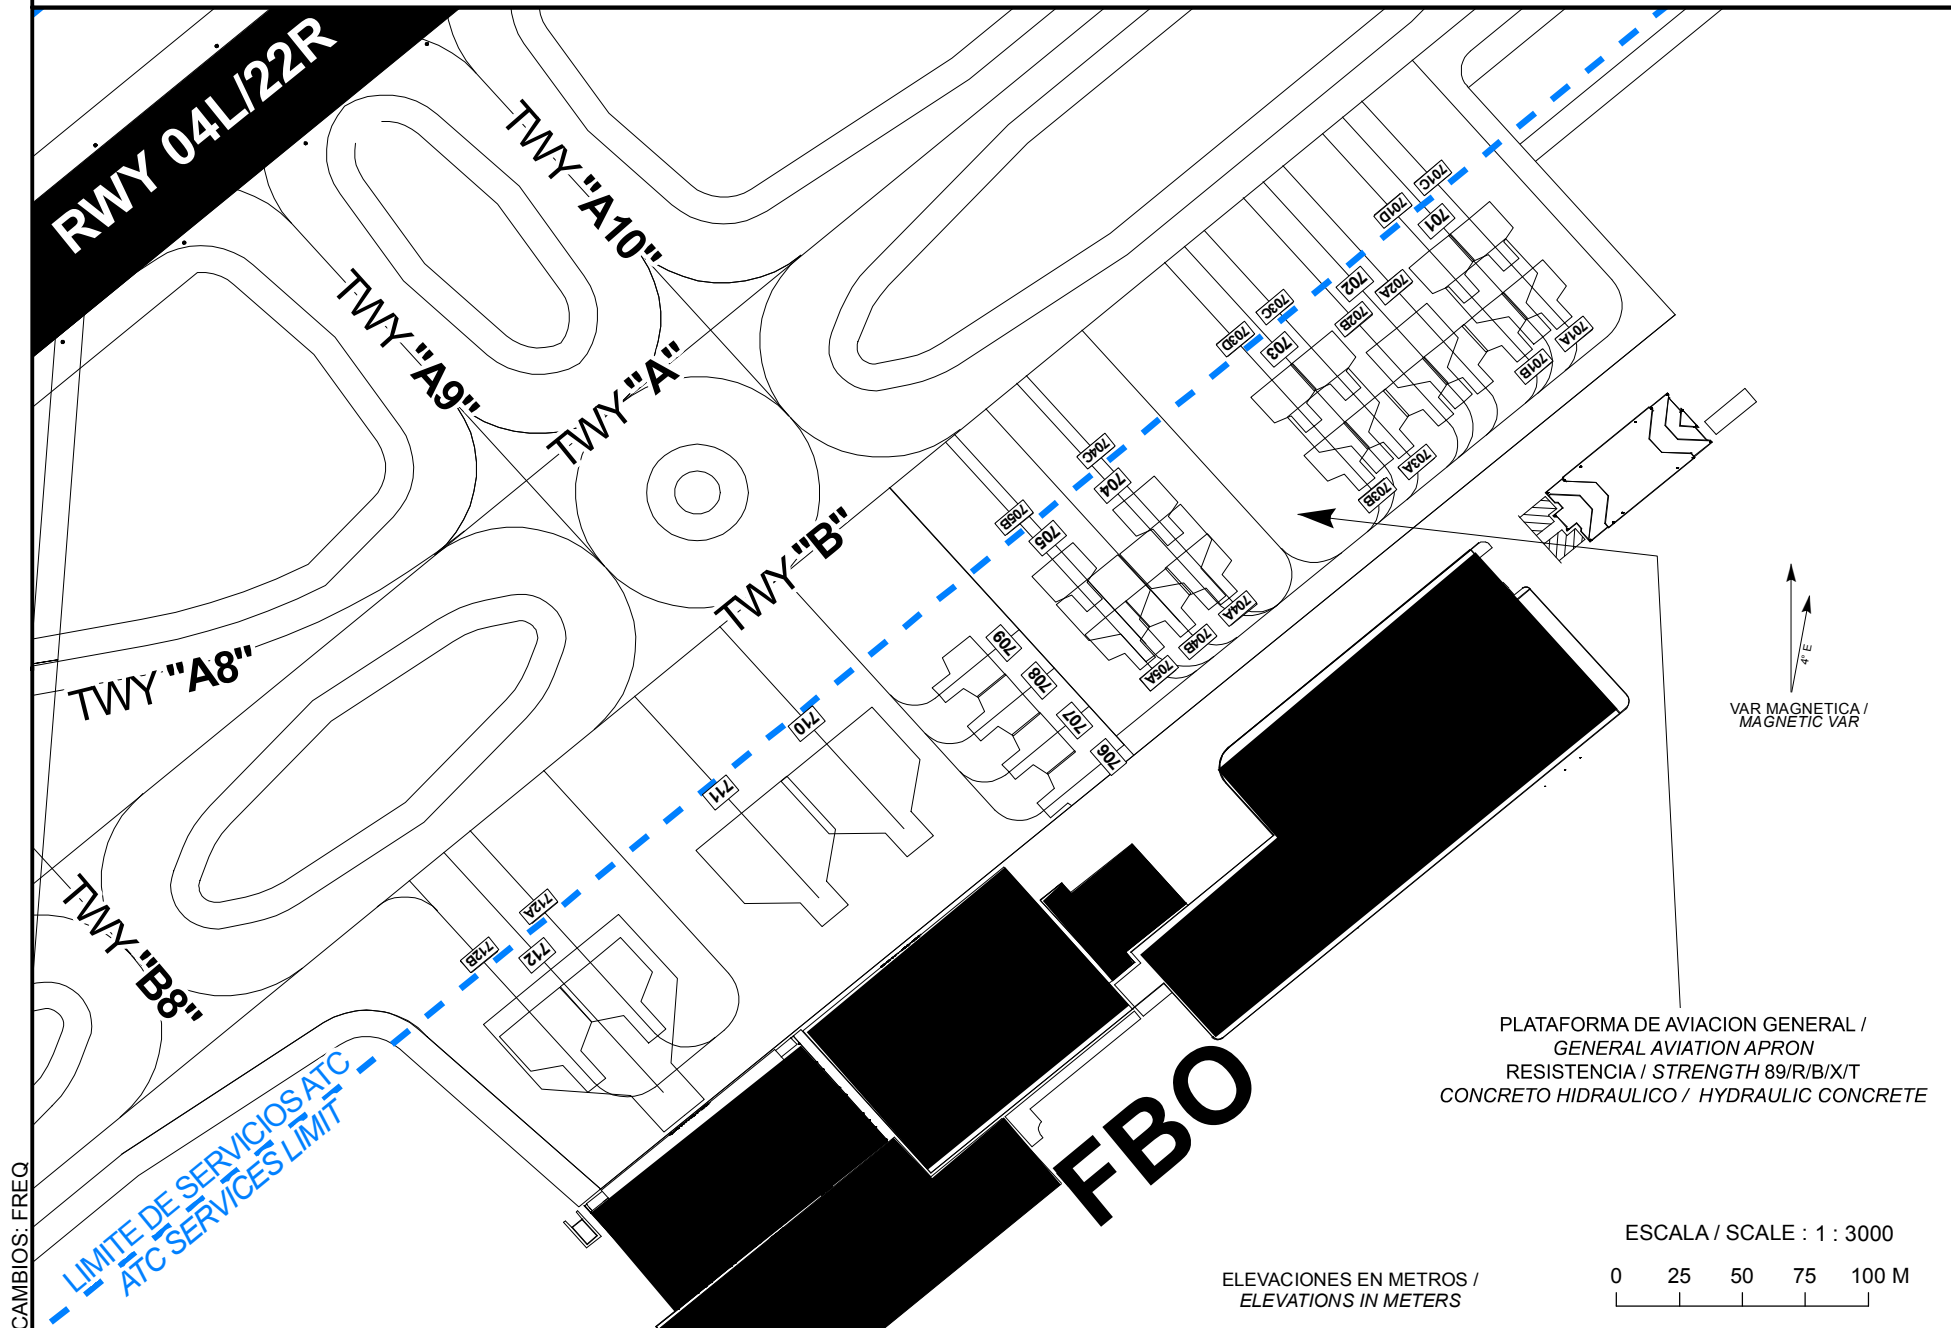

**COORDENADAS INS, DE PUESTOS DE ESTACIONAMIENTO DE AERONAVES AVIACION GENERAL /
COORDINATES INS, FOR AIRCRAFT STANDS, GENERAL AVIATION**

POSICION/ POSITION	LAT (N)	LONG (W)
701	19° 45' 02.2"	099° 00' 50.2"
701A	19° 45' 02.36"	099° 00' 49.91"
701B	19° 45' 01.95"	099° 00' 50.41"
701C	19° 45' 03.11"	099° 00' 50.59"
701D	19° 45' 02.7"	099° 00' 51.09"
702	19° 45' 01.37"	099° 00' 51.21"
702A	19° 45' 01.53"	099° 00' 50.92"
702B	19° 45' 01.12"	099° 00' 51.43"
703	19° 45' 00.54"	099° 00' 52.22"
703A	19° 45' 00.71"	099° 00' 51.93"
703B	19° 45' 00.29"	099° 00' 52.44"
703C	19° 45' 01.45"	099° 00' 52.61"
703D	19° 45' 01.04"	099° 00' 53.12"
704	19° 44' 58.79"	099° 00' 54.37"
704A	19° 44' 58.84"	099° 00' 54.21"

POSICION/ POSITION	LAT (N)	LONG (W)
704B	19° 44' 58.41"	099° 00' 54.73"
704C	19° 44' 59.59"	099° 00' 54.9"
705	19° 44' 58.13"	099° 00' 55.18"
705A	19° 44' 57.99"	099° 00' 55.25"
705B	19° 44' 58.74"	099° 00' 55.94"
706	19° 44' 56.09"	099° 00' 56.36"
707	19° 44' 56.59"	099° 00' 56.81"
708	19° 44' 57.08"	099° 00' 57.26"
709	19° 44' 57.57"	099° 00' 57.71"
710	19° 44' 55.76"	099° 00' 58.28"
711	19° 44' 54.87"	099° 00' 59.37"
712	19° 44' 52.37"	099° 01' 01.37"
712A	19° 44' 53.23"	099° 01' 01.56"
712B	19° 44' 52.59"	099° 01' 02.34"