


PLANO DE ESTACIONAMIENTO Y ATRAQUE DE AERONAVES/
AIRCRAFT PARKING/DOCKING CHART

ELEV AD 2244 M

TWR	118.25, 118.30
APP	119.00, 121.40, 128.85
SMC	121.80

SANTA LUCIA
AEROPUERTO INTL /
INTL AIRPORT
FELIPE ANGELES

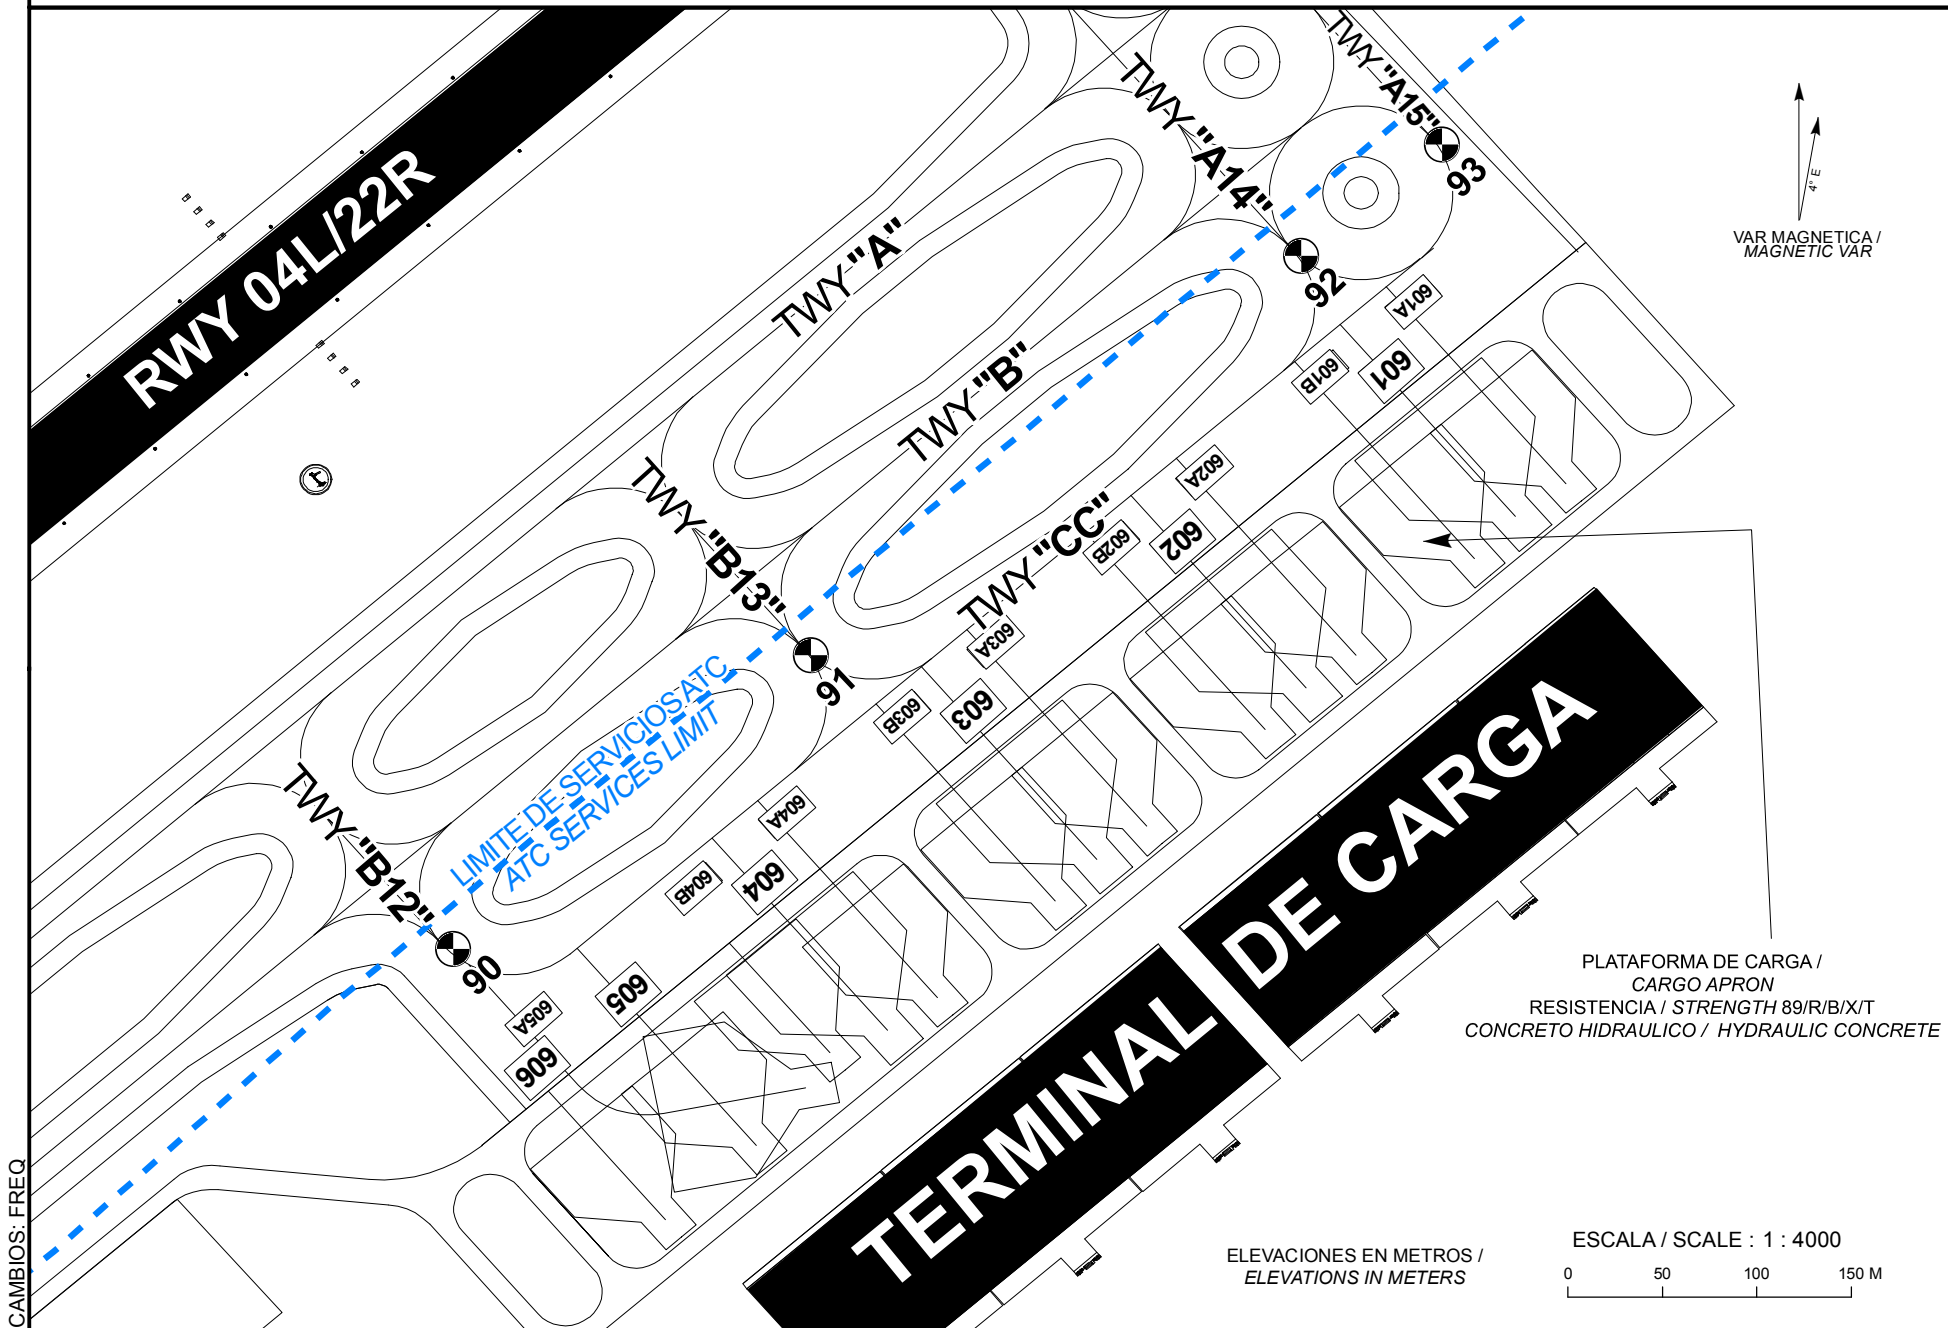

**COORDENADAS INS, DE PUESTOS DE
ESTACIONAMIENTO DE AERONAVES PLATAFORMA DE
CARGA / COORDINATES INS, FOR AIRCRAFT STANDS
CARGO APRON**

POSICION/ POSITION	LAT (N)	LONG (W)
601A	19° 45' 24.41"	099° 00' 16.88"
601	19° 45' 23.87"	099° 00' 17.73"
601B	19° 45' 23.14"	099° 00' 18.44"
602A	19° 45' 21.49"	099° 00' 20.47"
602	19° 45' 20.93"	099° 00' 21.33"
602B	19° 45' 20.21"	099° 00' 22.04"
603A	19° 45' 18.55"	099° 00' 24.07"
603	19° 45' 17.99"	099° 00' 24.92"
603B	19° 45' 17.28"	099° 00' 25.62"
604A	19° 45' 15.61"	099° 00' 27.65"
604	19° 45' 15.05"	099° 00' 28.5"
604B	19° 45' 14.67"	099° 00' 29.49"
605A	19° 45' 14.09"	099° 00' 29.92"
605	19° 45' 13.09"	099° 00' 30.75"
606	19° 45' 11.82"	099° 00' 32.31"

**COORDENADAS PUNTOS DE TRANSFERENCIA /
HAND OFF POINTS COORDINATES**

POSICION/ POSITION	LAT (N)	LONG (W)
90	19° 45' 16.12"	099° 00' 35.71"
91	19° 45' 21.40"	099° 00' 29.52"
92	19° 45' 27.98"	099° 00' 21.02"
93	19° 45' 29.58"	099° 00' 18.69"